BRAUN


Series 3




390cc-3

Type 5772



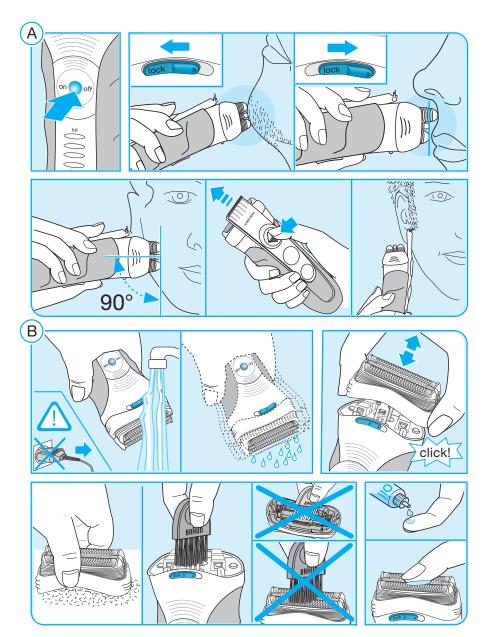

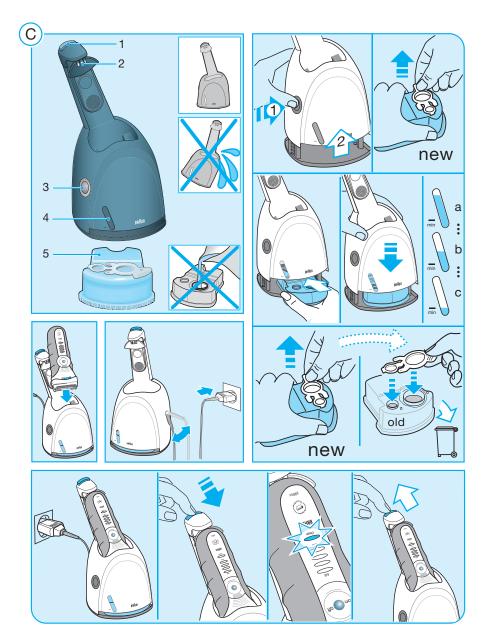

한국어

본 제품은 당사의 엄격한 기준에 맞추어 만들어진 우수한 품질과 기능 그리고 디자인을 갖춘 제품입니다. 저희 브라우 제품을 구입해 주셔서 감사한니다

주의사항

본 제품은 안전 저전압 전원 장치가 갖추어진 전용 코드 세트가 들어 있습니다. 어떤 부품도 함부로 바꾸거나 조작하지 마십시오. 감전의 위험이 있습니다.

이 제품은 안전을 위하여 보호자의 관리 감독이 없는 경우 어린아이나 심신박약자가 사용할 수 없습니다. 어린아이의 손이 닿지 않는 곳에 보관하십시오.

각 부의 명칭

- 1. 면도망 & 면도날 카세트
- 2. 긴수염 정리용 트리머
- 3. 정밀면도 세팅 스위치(«lock»)
- 4. On/Off 스위치
- 5 충전 표시등(녹색)
- 6 저 충전표시등(적색)
- 7. 청소 표시등(노란색)
- 8. 부품 교체 표시등
- 9. 면도기 전원 소켓
- 10. 전용 코드 세트
- 11 보관 가방

츳전

충전을 위한 주변의 최적 온도는 15℃에서 35℃입니다. 면도기를 50℃ 이상의 온도에 장시간 방치하지마십시오.

- 면도기 스위치를 끈 상태에서 전용 코드(10)를 이용해서 면도기를 전원에 연결시키십시오.
- 처음 충전 시에는 최소한 4시간 이상 연속 충전 하십시오.

- 충전된 면도기는 사용하면서 방전됩니다. 이후 충전은 약 1시간정도 걸립니다
- 완전 충전된 면도기는 코드 없이 수염 정도에 따라 약
 45분 정도 사용 가능합니다.

코드 없이 면도하실 수 있으며 사용한 면도기는 Clean&Renew 에서 매번 청소되며 자동으로 충전됩니다.

(C Clean&Renew (청소 겸용 충전기)를 참조)

- 배터리 용량은 몇 번의 충전과 방전을 거듭한 후에 최대회됩니다.
- 5분간의 짧은 충전(전용코드(10)이용)으로도 한 번의 면도가 가능합니다.
- 충전용 배터리가 방전된 경우 충전하지 않고 전용 코드를 전원에 연결해서 사용하실 수 있습니다.

충전표시등(5)

녹색 충전표시등은 충전상태를 나타내며 면도기가 충전 중이거나 전원을 켤 때 깜박입니다. 면도기가 완전히 충전된상태일경우면도기가켜져 있거나전원이 연결되어 있으면 녹색등이 지속적으로 켜지게 됩니다.

저 충전표시등(6)

배터리가 얼마 남지 않은 경우 적색 저 충전등에 불이 깜박거립니다. 그러나 이때 하시던 면도는 충분히 끝내실 수 있습니다.

A 면도방법

On/Off 스위치(4)를 눌러서 전원을 켭니다.(그림) 자유자재로 움직이는 면도망이 자동으로 얼굴의 각도에 맞게 움직입니다.(그림)

긴수염 정리용 트리머(2)

긴수염 정리용 트리머를 위로 밀면서 코밑 수염이나 구레나룻을정리합니다.

정밀면도 세팅 스위치(<<lock>>)(3)

긴수염 정리용 트리머를 위로 밀면서 코밑 수염이나 구레나룻을정리합니다.

완벽한 면도를 위한 제안

최상의 결과를 얻기 위해 다음과 같은 3단계 과정에 따라 면도하십시오.

- 1. 항상 세면 전에 면도하십시오.
- 2. 면도기는 피부와 90° 각도로 사용하십시오.
- 3. 피부를 곧게 편 상태에서 수염이 자란 반대방향으로 면도하십시오.

B 면도기를 최상의 상태로 유지하려면

청소 표시 기능

Clean&Renew로 매일 면도기를 청소해야 합니다. 면도한 후에는 꼭 노란 청소 표시등(7)이 계속 켜지게 됩니다. 만약 청소를 하지 않은 경우에는 어느 정도 시간이 지난 후에 꺼지게 됩니다. 면도기의 전자공학 시스템이 그동안 수동으로 청소한 것으로 인식하고 다음 청소가 필요한 시기를 새롭게 계산합니다. Clean&Renew로 청소하는 동안에 노란 등이 깜박 거리다가 약 4시간 후 청소가 끝나면 자동으로 꺼집니다.

자동청소

면도기를 Clean&Renew 에 꽂아 놓으면 자동으로 청소를 합니다. (C Clean&Renew (청소겸용충전기)를 참조)

수동청소는 Clean&Renew 를 사용할 수 없을 때나 여행 중에만 사용하십시오.

수동 청소

면도기 헤드는 흐르는 수돗물에 세척하실 수 있습니다.

> ボ 주의: 물청소를 하기전에 반드시면도기를 전원과 분리하십시오.

면도 후, 면도기 헤드를 흐르는 물에 헹굼으로서 빠르고 간편한 청소 및 관리가 가능합니다.

- 면도기의 스위치를 켜고(코드 없이) 면도기 해드를 흐르는 따뜻한 물에 헹구십시오. 연마제가 들어 있지 않은 액체 비누를 사용하십시오. 거품을 모두 헹군 후에 면도기를 수초동안 작동시키십시오.
- 다음 면도기 스위치를 끄고 면도망&면도날(1)을 분리 한 후 말려주십시오.
- 정기적으로 물청소를 한다면 일주일에 한번 긴수염 정리용 트리머(2)와 면도망&면도날 (1)에 윤활유를 한 방울떨어뜨려 주십시오.(그림)

브러쉬를 사용해서 면도기를 청소하실 수 있습니다.

- 면도기 스위치를 끄십시오. 면도망&면도날 분리한 후 평평한 표면에 놓고 톡톡 쳐서 털어줍니다.
- 솔을 사용해서 면도기 헤드의 내부를 청소하십시오.
 면도망&면도날은 솔로 청소하지 마십시오.
 손상의 위험이 있습니다.

면도기 부품 교체와 재설정을 위한 표시등

100% 면도 효과를 얻기 위해 부품 교체 표시등(8)에 불이 들어 오거나(약1년 6개월후) 부품성능 저하시 면도망&면도날(1) 을 교체해 주십시오.

면도망&면도날의 교체시기가되면 부품 교체표시등이 켜져서7번 면도를 하는 동안 잊지 않도록 알려줍니다. 그 후에는 자동으로 재설정됩니다. 면도망&면도날(1)을 교체한 후에 On/Off 스위치(4)를최소 5초간 눌러서 키운터를 재설정합니다. 조작하는 동안 교체표시등이 깜박거리다. 재설정이 완료되면 불이 꺼집니다. 수동설정은 자유롭게하실 수 있습니다.

배터리 관리

충전용 배터리의 최대 용량을 유지하기 위해 약6개월에 한번씩 완전히 방전시킨 후 재충전하십시오.

환경보호 주의사항

이 제품에는 충전용 배터리가 들어 있습니다. 환경보호를 위하여 수명이 다한 후에도 일반쓰레기와 함께 버리지 마십시오. 브라운 서비스센터나 지정된 폐전지 수거함을 통해 배출하십시오.



C Clean&Renew (청소 겸용 충전기)

브라운 Clean&Renew는 면도기 청소와 충전 및 보관을 위하여 개발되었습니다. Clean&Renew로 매일 면도기를 청소해 주십시오.자동 청소 중에 면도기는 최상의 청소를 위해 스위치가 이따금 켜졌다 꺼졌다 합니다. 특별히 조제된 세척용액은 소량의 윤활유가 들어있기 때문에 따로 윤활유를 공급할 필요가 없습니다.

주의사항

- 제품에 들어있는 코드세트만을 사용하십시오.
- 세척용액이 새지 않도록 평평하고 안정된 곳에 놓아두십시오.
 세척 카트리지가 장착된 경우에는 기울이거나
- 갑자기 움직이거나 운반하지 마십시오.

 거울 캐비닛이나 라디에이터 위 또는 미끄러운 표면 위에 놓지 마십시오. 직사광선에 노출하지
- 이 제품은 발화성 용액을 함유하고 있습니다. 인화성 물질이나 담뱃불을 가까이 하지 마십시오.
- 어린이의 손이 닿지 않도록 하십시오. 카트리지 용액은 리필하지 말고 브라운 정품 카트리지만 사용하십시오.

제품명세

1 시작/분리 버튼

마십시오.

- 2 커택트보우(contact bow)
- 3 카트리지 교환을 위한 리프트 버튼
- 4 레벨 표시기
- 5 클리닝 카트리지

카트리지 장착

- 리프트 버튼(3)을 눌러 몸체를 엽니다.
- 카트리지를 평평하고 안정한 곳(탁자 등)에 올려놓고 조심스럽게 카트리지 뚜껑을 제거합 니다. 카트리지를 틀 안으로 끝까지 밀어 넣습니다.
- 천천히 몸체를 아래로 눌러서 끼워줍니다.

카트리지 교환

리프트 버튼을 눌러 몸체를 열고 몇 초간 기다린 후 다 사용한 카트리지를 빼냅니다.

새 카트리지의 뚜껑으로 다 사용한 카트리지를 확실히 막아서 폐기하십시오. 사용한 카트리지는 오염된 클리닝 용액이 포함되어 있습니다. 사용한 카트리지는 생활 쓰레기와 함께 배출할 수 있습니다

사용방법

- Clean&Renew를 전원에 연결시키십시오. 뒤에 있는 전용 소켓이 공간을 절약해줍니다. 면도 후 면도기 스위치를 끄고 Clean&Renew 앞부분이 보이도록 거꾸로 꽂아둡니다.
- 시작/분리버튼(1)을 눌러서 면도기를 연결합니다 청소과정이 시작됩니다. 노란색 표시등이 청소하는 동안(약 2분 동안 세척하고 4기간 동안 건조함) 깜박거립니다.
- 작동 중에는 면도기가 세척액에 젖어서 사용할 수 없으므로 중단시키지 마십시오. 불가피한 경우라면 시작/분리버튼(1)을 누르십시오.
- 청소가 끝난 후 노란색 표시등이 꺼지면 면도기를 사용하셔도 됩니다. 시작/분리버튼(1)을 눌러서 면도기를 빼내십시오.
- 5회 정도 사용한 후에는 세척기능이 떨어지므로 새로운 카트리지로 교체해 주십시오.
- 세척 카트리지 한 개로 30회의 청소가 가능합니다. 레벨 표시기가 〈min〉를 가리키면 카트리지내에 약 5회 정도 사용할 수 있는 세척액이 남아있음 을 의미합니다.

매일 사용할 경우 약 4주마다 교체해 주셔야 합니다.

- 위생 세척 카트리지에는 알코올이 들어있어 일단 개봉하면 천천히 공기 중으로 증발됩니다.
 매일 사용하지 않더라도 약 8주 후에는 카트리지를 교체해 주십시오.
- 청소 카트리지에는 윤활제도 들어 있기 때문에 청소가 끝난 후에 면도망 프레임에 자국이 남을 수 있습니다. 하지만 이 자국은 천이나 부드러운 화장지로 살짝 닦아주면 금방 없어집니다.
- 이따금 젖은 헝겊으로 몸체 특히 면도기를 꽂아 놓는 부분을 잘 닦아주십시오.

기타 부품들

브라운 센터에서 구입하실 수 있습니다.

- **면도망&면도날**:32S
- Cleaning Cartridge Clean&Renew : CCR

상기 사항은 소비자에게 알리지 않고 변경될 수 있습니다.

전자 부품명세는 전용 코드 세트에 표시된 사항을 참조하십시오.

본 제품은 환경보호를 위하여 수명이 다한 후에도 일반쓰레기와 함께 버리지 마십시오. 브라운 서비스센터나 지정된 폐전지 수거함을 통해 배출하십시오



품질 보증

- 본 제품은 **구입일로부터 1년간** 품질을 보증합니다.
- 1년간의 품질 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다.
- 보증기간 내에라도 소비자의 귀책사유에 의한 파손(전압을 잘못 사용한경우, 부적절한전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에 지장이 없는 경미한 결함 등은 무상수리 또는 교환이 적용되지 않습니다.

• 브라운 서비스 센터가 아닌 다른 곳에서 수리를 하였거나 브라운 정품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다. 그리고 본 제품의 구입일자가 판매점에 의해 혹은 구입시의 영수증에 의해 확인되어야만 정상적인 품질 보증품으로 인정됩니다.(구입시 영수증을 잘 보관하시어 에프터 서비스 시 불이익이 없도록 하십시오.) 에프터 서비스를 받으셨더라도 원래의 품질보증기간이 연장

본 제품은 소비자분쟁해결기준에 따라 보상 받을 수 있습니다. A/S 문의: 1588 - 1588

가까운 대우 일렉 서비스 센터에서 A/S를 받으실 수 있습니다.

브라운제품:

전국 유명 백화점, 할인점, 양판점 및 전자상가에서 구입할 수 있습니다.

http://www.braun.com http://www.braun.co.kr

되는 것은 아닙니다.



English

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun Shaver.

Warning

Your shaving system is provided with a special cord set, which has an integrated Safety Extra Low Voltage power supply. Do not exchange or tamper with any part of it, otherwise there is risk of an electric shock. This appliance is not intended for use by children or persons with reduced physical or mental capabilities, unless they are given supervision by a person responsible for their safety. In general, we recommend that you keep the appliance out of reach of children. Children should be supervised to ensure that they do not play with the appliance.

Description

- 1 Foil & Cutter cassette
- 2 Long hair trimmer
- 3 Precision setting switch («lock»)
- 4 On/off switch
- 5 Charging lights (green)
- 6 Low-charge light (red)
- 7 Cleaning light (yellow)
- 8 Replacement light for shaving parts
- 9 Shaver power socket
- 10 Special cord set
- 11 Travel pouch

Charging

The best environmental temperature for charging is between 15 °C to 35 °C. Do not expose the shaver to temperatures higher than 50 °C for extended periods of time.

- Using the special cord set (10), connect the shaver to an electrical outlet with the motor switched off.
- When charging for the first time, leave the shaver to charge continuously for 4 hours.
 Subsequent charges will take about 1 hour.
- A full charge provides up to 45 minutes of

- cordless shaving time depending on your beard growth.
- Shave without the cord. With normal use the shaver will be charged automatically after every cleaning in the Clean&Renew (see «C Clean&Renew»).
- Maximum battery capacity will only be reached after several charging/discharging cycles.
- 5-minute quick charge (with the special cord set (10)) is sufficient for a shave.
- If the rechargeable batteries are discharged, you may also shave by connecting the shaver to an electrical outlet via the special cord set.

Charging lights (5)

The green charging lights show the charge status of the batteries. The green charging light blinks when the shaver is being charged or switched on. When the battery is fully charged, all green charging lights shine permanently, provided the shaver is switched on or connected to an electrical outlet.

Low-charge light (6)

The red low-charge light flashes when the battery is running low.

You should be able to finish your shave.

A Shaving

Press the on/off switch (4) to operate the shaver (picture).

The flexible shaving foils automatically adjust to every contour of your face (picture).

Long hair trimmer (2)

To trim sideburns, moustache or beard, slide the long hair trimmer upwards.

Precision setting switch («lock») (3)

For precise handling in hard to shave areas (e.g. under the nose) slide the switch (3) to the right to position «lock». The centre trimmer and one foil will be lowered.

Tips for the perfect shave

For best results, Braun recommends you follow 3 simple steps:

- 1. Always shave before washing your face.
- 2. At all times, hold the shaver at right angles (90°) to your skin.
- 3. Stretch your skin and shave against the direction of your beard growth.

B Keeping your shaver in top shape

Cleaning indicator

Your shaver should be cleaned daily in the Clean&Renew, and certainly when the yellow cleaning light (7) shines constantly after shaving. If this is not done, the yellow light will go out after some time. The shaver's electronics will then assume it has been cleaned manually and a new calculation of the time when the next cleaning is required will be started. During the cleaning process in the Clean&Renew the yellow light will flash and will go off after approx. 4 hours when cleaning is finished.

Automatic cleaning

Once the shaver is put into the Clean&Renew, it is cleaned automatically (see «C Clean&Renew»).

Manual cleaning is recommended only when the Clean&Renew is not available, e. g. when travelling.

Manual cleaning



The shaver head is suitable for cleaning under running tap water. Warning: Detach the shaver from the power supply before cleaning the shaver head in water.

Regular cleaning ensures better shaving performance. Rinsing the shaver head under running water after each shave is an easy and fast way to keep it clean:

- Switch the shaver on (cordless) and rinse the shaver head under hot running water.
 You may use liquid soap without abrasive substances. Rinse off all foam and let the shaver run for a few more seconds.
- Next, switch off the shaver, remove the shaver Foil & Cutter cassette (1) and let it dry.
- If you regularly clean the shaver under water, then once a week apply a drop of light machine oil onto the long hair trimmer (2) and shaver Foil & Cutter cassette (1).

Alternatively, you may clean the shaver using a brush:

- Switch off the shaver. Remove the shaver Foil & Cutter cassette and tap it out on a flat surface.
- Using a brush, clean the inner area of the shaver head. However, do not clean the shaver Foil & Cutter cassette with a brush as this may damage it.

Replacement light for shaving parts/Reset

To maintain 100% shaving performance, replace the shaver Foil & Cutter cassette (1), when the replacement light for shaving parts (8) comes on (after about 18 months) or when worn.

The replacement light will remind you during the next 7 shaves to replace the foil and cutter cassette. Then the shaver will automatically reset.

After you have replaced the Foil & Cutter cassette (1), press the on/off switch (4) for at least 5 seconds to reset the counter. While doing so, the replacement light blinks and goes off when the reset is complete. The manual reset can be done at any time.

Preserving the batteries

In order to maintain the optimum capacity of the rechargeable batteries, the shaver has to be fully discharged (by shaving) every 6 months approximately. Then recharge the shaver to full capacity.

Environmental notice

This product contains rechargeable batteries. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection sites provided in your country.

C Clean&Renew

Braun Clean&Renew has been developed for cleaning, charging and storing your shaver. Clean your shaver daily in the Clean&Renew. During the automated cleaning process, the shaver is switched on and off at intervals to obtain best cleaning results. Since the specially formulated cleaning fluid contains a small amount of oil, the cleaning procedure also fulfils the lubrication needs of the shaver.

Important

- Only use the power supply cord set supplied with the shaver.
- In order to avoid any leakage of the cleaning fluid, place the appliance on a flat, stable surface. Do not tip, move suddenly or transport in any way if a cleaning cartridge is installed.
- Do not place the appliance in a mirror cabinet, nor store it over radiators, nor place it on polished or lacquered surfaces.
 Do not expose to direct sunlight.
- The appliance contains highly flammable liquid. Keep it away from sources of ignition. No smoking.
- Keep out of reach of children. Do not refill cartridge. Use only original Braun refill cartridge.

Description

- 1 Start/release button
- 2 Contact bow
- 3 Lift button for cartridge exchange
- 4 Level indicator
- 5 Cleaning cartridge

Before using Clean&Renew Installing the cartridge

- Press the lift button (3) to open the housing.
- Hold the cartridge down on a flat, stable surface (e.g. table). Carefully remove the lid from the cartridge. Slide the cartridge into the base as far as it will go.
- Slowly close the housing by pushing it down until it locks.

Replacing the cartridge

After having pressed the lift button to open the housing, wait for a few seconds before removing the used cartridge.

Before discarding the used cartridge, make sure to close the openings using the lid of the new cartridge, since the used cartridge will contain contaminated cleaning solution. The used cartridge can be disposed in the household waste.

Operating your Clean&Renew

- Connect your Clean&Renew with the cord set to the mains electricity supply.
 The special socket at the back is adjustable to save space. After each shave, switch the shaver off and put it into the Clean&Renew, upside down and with the front showing.
- Push the start/release button (1) to lock and connect the shaver. The cleaning process will start. The yellow light on the shaver will flash during the complete process (approx. 2 minutes cleaning, min. 4 hours drying).
- Do not interrupt the cleaning process, as it leaves the shaver wet and not fit for use. If interruption is needed nonetheless, press the start/release button (1).
- When cleaning is finished, the yellow light will go off and the shaver is ready for use.
 To release it, push the start/release button.
- A cleaning cartridge should be sufficient for about 30 cleaning cycles. When the level indicator (4) has reached the «min» mark, the remaining fluid in the cartridge is sufficient for about 5 more cleaning cycles.

Then the cartridge should be replaced, when used daily approx. every 4 weeks.

- The hygienic cleaning solution cartridge contains alcohol which, once opened, will naturally evaporate slowly into the surrounding air. Each cartridge, if not used daily should be replaced after approx.
 8 weeks.
- The cleaning cartridge also contains lubricates, which may leave residual marks on the shaver head after cleaning. However, these marks can be removed easily by wiping gently with a cloth or soft tissue paper.
- Clean the housing from time to time with a damp cloth, especially the opening where the shaver rests.

Accessories

Available at your dealer or Braun Service Centres:

- Foil & Cutter cassette: 32S
- Cleaning cartridge Clean&Renew: CCR

Subject to change without notice.

For electric specifications, see printing on the special cord set.

Please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.